

UF4-200C Universal Remote Control

Master Power Control

Perform the following steps to enable or disable power control for each device:



1. Make sure all devices to be controlled are turned on.
2. Press and hold any mode key for approximately three seconds until all four mode keys flash twice. The selected mode key will continue to flash.
3. Press Power twice. The selected mode key will flash three times and turn off.

Channel Lock

Channel Lock prevents the channel up and down key from operating any device other than the cable box – no matter which device is currently selected. Not Channel Lock has no effect on entering channels via the numeric keys.

The UF4-200C comes with Channel Lock activated. If you want the channel up and down key to operate channel functions on your TV, VCR or auxiliary device, you will need to de-activate Channel lock. To de-activate Channel Lock, follow these steps:

1. Press and hold the Cable key for 3 seconds. The Cable key will continue to flash.
2. Press Channel up; press Channel Down; then press ok. You will then get a confirmation blink.

Repeat these steps to re-activate Channel Lock.

UF4-200C Remote TV Codes

TV Brands	Codes	TV Brands	Codes
AOC	005,006,019,020 120,140,163,173	ASA	047
Admiral	018,090	Aiwa	090
Akai	032,070,172	Amark	120
Amstrad	033	Anam	005,009,021,041 120,121
Archer	120	Audiovox	120
Bell & Howell	018	Brocksonic	172,173,174
Candle	006,022,023,025 163	Capehart	019
Citizen	006,016,018,022 023,024,025,026 144,163	Concerto	023
Contec	041,091	Craig	021,041
Crown	026	Curtis Mathes	006,016,018,026 059,125,163,172
CXC	041	Daewoo	005,024,029,030 031,032,172
Daytron	026	Dimensia	125
Dumont	047	Electrohome	026
Emerson	023,026,033,034 035,037,038,039 041,122,143,144 172,176	Envision	163
Fisher	042,090	Fujitsu	034
Funai	034,041	Futuretech	041
GE	003,008,009,023 043,044,125,130 147,172	Goldstar	005,023,026,045 046,088,172,173
Grundig	047	Hallmark	023
Hinari	034	Hitachi	018,023,026,048 049,050,051,052 053,054,055,126 172
Infinity	066,159	JBL	066,159

JC Penney	003,005,006,014 016,026,043,096 125,163,172	Jensen	056
JVC	057,058,059,060	Kawasho	061
Kenwood	006	Kloss	022,110
KTV	026,039,041,172	Lodgenet	018
Logik	018	Luxman	023
LXI	003,066,090,117 125,131,172,173	Magnavox	000,006,010,017 020,025,027,028 066,067,068,110 151,154,159,163 164,167,171,172 173,175
Majestic	018	Marantz	006,066,068,088 163,172
Matsui	032,109	Memorex	018,032,090
MGA	004,005,006,023 071,072,163,172	Mitsubishi	004,005,023,070 071,072,173
MTC	005,006,016,023 031,163	NAD	002,117
National	011,159	NEC	005,006,007,023 028,144,163,172 173
Nikkai	113,118	Onwa	041
Optonica	129	Osume	091
Panasonic	008,009,011,012 066,159	Philco	005,006,025,067 068,110,159,163 172
Philips	005,025,066,068 088,146,159,163	Pioneer	002,048,051,076
Portland	005,026,172	Proscan	125
Proton	006,013,019,023 026,172	Pulsar	001
Quasar	008,009	Radio Shack	026,041,107,112 141,173
RCA	003,005,014,048 078,079,080,082 084,085,086,087	Realistic	090,041

	125,133,134,172		
SAA	145	Saba	051
Saisho	032,033,109	Sampo	006,019,163
Samsung	005,006,016,023 026,032,088,163 172,173	Sanyo	042,089,090,091 092,109
Scott	026,034,037,041 093,173	Sears	003,023,034,042 090,096,098,099 101,102,014,117 125,131
Sharp	026,091,129,141	Signature	018
Sony	000,109,119,122	Soundesign	023,025,041,172
Spectricon	120	SSS	005,041
Supra	022,023	Sylvania	006,025,066,068 110,112,159,163 172,173
Symphonic	132	Tandy	112,112,129
Tatung	009	Technics	008
Techwood	023	Teknika	004,005,016,018 022,023,024,025 026,034,041,072 114,159
Telerent	018	Teletch	032
Thomson	051,116,142	TMK	023,172
Toshiba	016,017,017,090 096,117,118,131	Totevision	026
Universal	043	Vector Research	006
Victor	057	Video Concepts	070
Vidtech	005,023,172,173	Viking	022
Wards	005,006,018,023 034,043,067,068 119,125,141,159 163,172,173	Westinghouse	090
Yamaha	005,006	Zenith	001,018
Zonda	120		

UF4-200C Remote VCR Codes

VCR Brand	VCR Codes	VCR Brand	VCR Codes
ASA	065	Aiwa	088
Akai	008,013,014,015 016,018,019,020 145,157	Alba	046
Amstrad	088	Audio Dynamics	030,093
Broksonic	008,059,148	Bush	089
Candle	022,042,056,080 092,093	Cannon	054
Canon	042	Capehart	043,046
Citizen	056,091,092,093	Craig	044,082,091
Curtis Mathes	054,092,105	DBX	030,093
Daewoo	034,046,093,150	Daytron	046
Dimensia	105	Dumont	049
Dynatech	088	Electrohome	109
Emerson	005,006,008,009 010,011,012,059 068,088,090,109 132	Finlandia	049
Finlux	049,065,088	Fisher	048,049,081,082 084
Funai	088	General Electric	025,050,051,052 053,054,091,105 133
Go Video	164	Goldstar	030,033,056,092 102
Goodmans	085,089	Granada	049,081
Grundig	065	Harman Kardon	030,069
Hinari	089	Hitachi	036,037,038,040 041,088,094,095 121
ITT	018	JC Penney	030,052,054,080 081,091,092,093

			094
JVC	061,062,063,064 081,092,093,122 123	Jensen	060
Kenwood	062,081,092,093	Lloyd	088
Logik	089	Luxor	018
MEI	054	MGA	067,068,109
MTC	080,088	Magnavox	027,034,054,065 088,111,130,134 136,137,138,139 141,142,143,158 159
Marantz	030,054,065,081 085,093,102	Memorex	033,049,054,066 081,082,085,092 093,088
Minolta	094	Mitsubishi	062,067,068,069 070,071,109,124 125,140
Multitech	088,089,091	NAD	073,153
NEC	030,031,032,062 081,092,093,102 127,128,160	Optonica	072,085
Orion	006	Panasonic	021,022,023,024 026,054,098,114 129
Pentax	037,092,094	Philco	054,111
Philips	054,065,085,154 155	Pioneer	062,073,074,075 076,093
Portland	046,093	Proscan	105
Pulsar	033	Quartz	081
Quasar	054,078	RCA	025,026,027,028 037,091,094,105 146,147
Radio Shack	081,082,084,085 109	Realistic	049,054,080,081 082,084,085,088
SBR	065	Saisho	006
Salaro	067,081	Samsung	015,034,079,080 091

Sansui	032,062,093	Sanyo	044,049,081,082 083
Schneider	089	Scott	008,034,059,090
Sears	048,049,081,082 084,094	Sentra	046
Sharp	085,109,130	Sony	000,001,002,003
Sylvania	054,067,088,111	TMK	006
Tandy	081,082,084,085 088,109	Tashiko	088
Tatung	086	Teac	088
Teknika	054,087,088	Toshiba	034,035,067,084 090
Totevision	080,091	Unitech	080
Vector Research	030,092,093	Video Concepts	068,092,093
Videosonic	091	Wards	027,054,080,082 085,088,089,090 091,109,156,161
Yamaha	030,081,092,093	Zenith	033,062

